

D250 night view is not clear, Solution for checking and cleaning

Solution:

1. Please loose the camera screw and take off the clear cover. If the night view is clear without the cover, It is camera clear cover problem.
2. Please use a light shoot the cover to check any dust, finger print on the cover both out and inside.
3. Please use detergent and water to clean it. (Do not touch the cover both out and inside.)