

## How to upgrade firmware for Hikvision IPC & NVR?

1. Install SADP tool on your computer and find the NVR IP address.
2. Logon to NVR web page and find the below interface to upgrade firmware.

The screenshot displays the Hikvision web interface for configuration. The top navigation bar includes 'Live View', 'Playback', 'Picture', and 'Configuration' (1). The left sidebar shows 'System', 'System Settings', 'Maintenance' (2), 'Security', 'Camera Management', 'User Management', 'Network', 'Video/Audio', 'Image', 'Event', 'Storage', and 'VCA'. The main content area features 'Upgrade & Maintenance' (3) with sub-sections: 'Reboot', 'Default', 'Export', and 'Import Config. File'. The 'Upgrade' section (4) includes a 'Firmware' dropdown, a file input field, a 'Browse' button, and an 'Upgrade' button (5). A note at the bottom states: 'Note: The upgrading process will be 1 to 10 minutes, please don't disconnect power to the device during the process. The device reboots automatically after upgrading.' A link at the bottom right says: 'Please click here to download and install the plug-in. Close the browser when installing the plug-in.'